


## AIR CLEANER HOUSING

### REMOVAL

1. Disconnect negative battery cable.
2. Disconnect **mass airflow sensor** electrical connector.
3. Remove clean air duct between throttle body and air filter housing.
4. Remove vent tube.
5. Remove mounting bolt.
6. Remove air filter housing.
7. Raise vehicle.
8. Partially remove front fascia to gain access to air filter resonator (Refer to 13 - FRAME & BUMPERS/BUMPERS/FRONT FASCIA - REMOVAL).
9. Remove mounting bolt.
10. Remove air cleaner resonator.

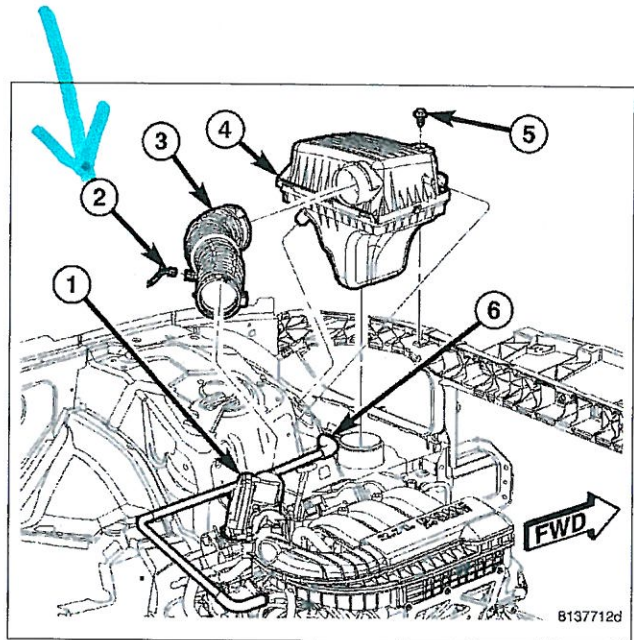

### INSTALLATION

1. Position air cleaner resonator assembly in vehicle.
2. Install mounting bolt. Tighten bolt to 10 N·m (89 in. lbs.).
3. Install front fascia (Refer to 13 - FRAME & BUMPERS/BUMPERS/FRONT FASCIA - INSTALLATION).
4. Position air filter assembly in vehicle.
5. Install mounting bolt. Tighten to 10 N·m (89 in. lbs.).
6. Install vent tube.
7. Install clean air duct between air filter housing and throttle body.

