



7. Remove the reservoir (4) from the vehicle.

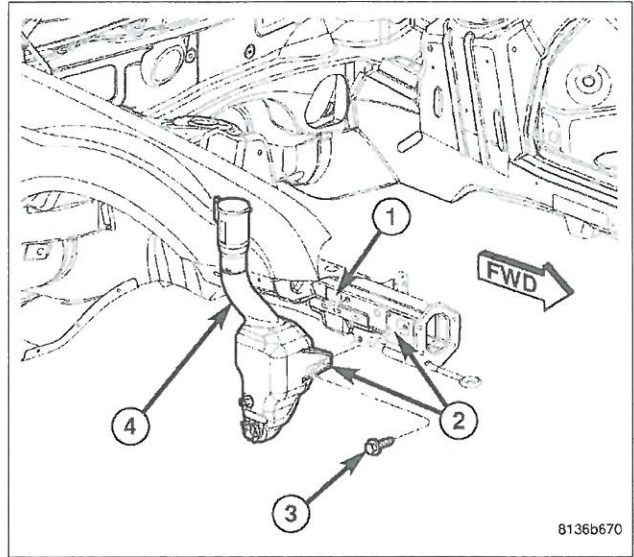

INSTALLATION

1. Position reservoir (4) in vehicle.

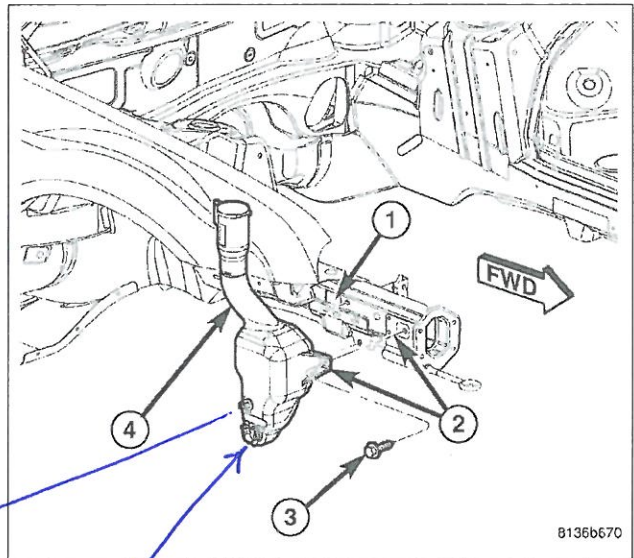

гидравлическая система

насос