



29. Disconnect the fuel supply line.

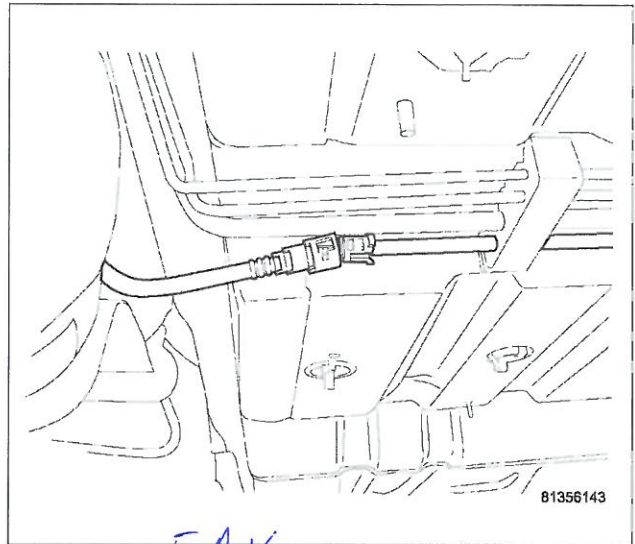

30. Support fuel tank with transmission jack.

31. Fuel tank strap bolt locations.

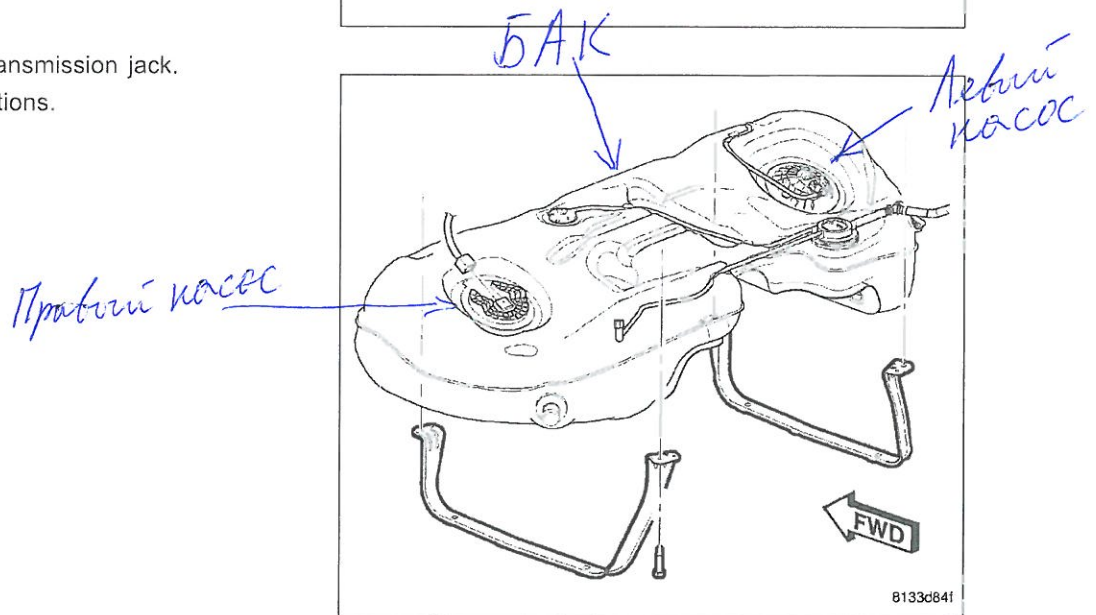

32. Remove bolt for fuel tank strap.

