

Yes

- Repair as necessary in accordance with the Service Information.
- Perform the PCM VERIFICATION TEST. (Refer to 28 - DTC-Based Diagnostics/MODULE, Powertrain Control (PCM) - Standard Procedure).

No

- Go To **4**

4. CHECKING THE IGNITION COIL OPERATION

1. Perform the diagnostic procedure for CHECKING THE IGNITION COIL OPERATION. (Refer to 29 - Non-DTC Diagnostics/Drivability - Gas - Diagnosis and Testing).

Were any problems found?**Yes**

- Repair as necessary in accordance with the Service Information.
- Perform the PCM VERIFICATION TEST. (Refer to 28 - DTC-Based Diagnostics/MODULE, Powertrain Control (PCM) - Standard Procedure).

No

- Go To **5**

5. CHECKING THE ENGINE COOLANT TEMPERATURE SENSOR OPERATION

1. Perform the diagnostic procedure for CHECKING THE ENGINE COOLANT TEMPERATURE SENSOR OPERATION. (Refer to 29 - Non-DTC Diagnostics/Drivability - Gas - Diagnosis and Testing).

Were any problems found?**Yes**

- Repair as necessary in accordance with the Service Information.
- Perform the PCM VERIFICATION TEST. (Refer to 28 - DTC-Based Diagnostics/MODULE, Powertrain Control (PCM) - Standard Procedure).

No

- Go To **6**

6. CHECKING THE MAP SENSOR OPERATION

1. Perform the diagnostic procedure for CHECKING THE MAP SENSOR OPERATION. (Refer to 29 - Non-DTC Diagnostics/Drivability - Gas - Diagnosis and Testing).